

Flexcell[®]'s Culture Plates Compatibility Guide

When using the following culture plates	Required Loading Stations	Plates usable with the following systems if upgraded with the listed accessories
BioFlex [®] 6-well culture plates	BioFlex [®] Loading Stations [™]	FX-4000T and FX-5000T require no further equipment FX-4000TT and FX-5000TT require BioFlex [®] Baseplate Kit or optional separately available BioFlex [®] Loading Stations [™] FX-5000C requires Tension FlexLink [®] with BioFlex [®] Baseplate and vacuum pump
BioPress [™] 6-well Compression culture plates	Not required	FX-5000T requires Compression FlexLink [®] with Compression Baseplate and compressor FX-5000TT requires Compression FlexLink [®] with Compression Baseplate and compressor FX-4000C and FX-5000C require no further equipment
HT BioFlex [®] 24-well culture plates	24-well Loading Stations [™]	FX-4000T and FX-5000T require 24-well HT Baseplate Kit FX-4000TT and FX-5000TT require 24-well HT Baseplate Kit FX-5000C requires Tension FlexLink [®] , vacuum pump and 24-well HT Baseplate Kit
Tissue Train [®] 6-well culture plates	Arctangle [®] Loading Stations [™] , Trough Loaders [™]	FX-4000T and FX-5000T require Tissue Train [®] Baseplate Kit or optional separately available Arctangle [®] Loading Stations [™] and Trough Loaders [™] FX-4000TT and FX-5000TT require no further equipment FX-5000C requires Tension FlexLink [®] , vacuum pump and Tissue Train [®] Baseplate Kit, or Tension FlexLink [®] , vacuum pump and optional separately available Arctangle [®] Loading Stations [™] and Trough Loaders [™]
Tissue Train [®] Circular Foam 6-well culture plates	BioFlex [®] Loading Stations [™]	FX-4000T and FX-5000T require no further equipment FX-4000TT and FX-5000TT require BioFlex [®] Baseplate Kit or optional separately available BioFlex [®] Loading Stations [™] FX-5000C requires Tension FlexLink [®] and vacuum pump
Tissue Train [®] Trapezoidal 6-well culture plates	Arctangle [®] Loading Stations [™] , Trapezoidal Trough Loaders [™]	FX-4000T and FX-5000T require Tissue Train [®] Baseplate Kit and Trapezoidal Trough Loaders [™] or optional separately available Arctangle [®] Loading Stations [™] and Trapezoidal Trough Loaders [™] FX-4000TT and FX-5000TT require Trapezoidal Trough Loaders [™] FX-5000C requires Tension FlexLink [®] , vacuum pump, Tissue Train [®] Baseplate Kit and Trapezoidal Trough Loaders [™] ; or Tension FlexLink [®] , vacuum pump, optional separately available Arctangle [®] Loading Stations [™] and Trapezoidal Trough Loaders [™]
UniFlex [®] 6-well culture plates	Arctangle [®] Loading Stations [™]	FX-4000T and FX-5000T require Tissue Train [®] Baseplate Kit or optional separately available Arctangle [®] Loading Stations [™] FX-4000TT and FX-5000TT require no further equipment FX-5000C requires Tension FlexLink [®] , vacuum pump and Tissue Train [®] Baseplate Kit; or Tension FlexLink [®] , vacuum pump and optional separately available Arctangle [®] Loading Stations [™]